



NO.	PARTS	NO.	PARTS	NO.	PARTS
4	O RING	47	SPRING WASHER	89	SCREW
8	CYLINDER	48	SCREW	90	RELIEF VALVE SET
9	BALL	49	HOUSING		
10	COMPRESSION SPRING	51	TRIGGER		
11	BALL	52	PRINTED CIRCUIT BOARD		
12	COMPRESSION SPRING	53	TRIGGER		
13	VALVE SCREW	54	SCREW		
14	BALL	55	FIGURE LINK		
15	COMPRESSION SPRING	56	BELT LINK		
16	O-RING	57	STOP COLLAR		
17	BACK-UP RING	58	SCREW		
18	VALVE SCREW	59	O RING		
19	RELEASE LEVER STEM	60	COPPER PIN		
20	BALL	61	SCREW		
21	SCREW	62	SPRING PIN		
22	LOCK PIN	63	CYLINDER		
23	COMPRESSION SPRING	64	NUT		
24	SPRING SEAT	65	SCREW		
25	SCREW	66	SPRING WASHER		
26	SOLID FILTER	67	BUSHING		
27	OIL SCREEN	68	LOCATING SCREW		
28	RETAINING RING	69	BACK UP RING		
29	O RING	71	HANDLE		
30	BACK UP RING	72	HINGE PIN		
31	SEAL	73	SCREW		
32	BACK UP RING	74	CRESCENT		
33	COMPRESSION SPRING	75	SPRING WASHER		
34	STOP COLLAR	76	U HEAD		
35	O-RING	77	MAIN PISTON		
36	PUMPING PISTON	78	COMPRESSION SPRING		
37	COPPER WASHER	79	CONNECTOR		
38	O RING	80	MOVING BLADE		
39	OIL RESERVOIR	81	MOVING BLADE		
40+41	FILLER CAP	82	SLEEVE		
	MAGNETIC BAR	83	BLADE GUIDE		
42	MOTOR & GEAR SET	84	CONNECTING COLLAR		
43	COMPRESSION SPRING	85	LOCATING SCREW		
44	EXTENSION LEVER	86	STOP COLLAR		
45	RELEASE LEVER	87	BALL		
46	CONICAL PIN	88	O RING		